



INSTALLATION MANUAL FOR KYOCERA PV MODULES

KU245-6BCA, KU250-6BCA, KU255-6BCA, KU260-6BCA
KU245-6BPA, KU250-6BPA, KU255-6BPA, KU260-6BPA

Please read this manual carefully before installing the modules.

6C-213300

1. INTRODUCTION

As the world leader in the development and application of high technology ceramic/silica materials, Kyocera offers a wide range of highly efficient and reliable crystalline silicon solar photovoltaic (PV) power modules. Kyocera began to extensively research PV technology in 1975 and commenced manufacturing operations in 1978. Since then, Kyocera has supplied millions of cells and modules throughout the world. With years of experience and state-of-the-art technology, Kyocera provides the highest quality PV power modules in a range of sizes designed to meet the requirements of the most demanding energy users worldwide.

2. APPLICATIONS

Kyocera PV module (hereinafter referred to as “the PV module”) is a reliable, virtually maintenance-free direct current (DC) power source, designed to operate at the highest level of efficiency. The PV module is ideal for residential, commercial, or utility applications; grid-tie or off-grid applications and those with or without using storage batteries.

3. WARNINGS & SAFETY

PV modules generate electricity when exposed to light. Arrays of many modules can cause lethal shock and burn hazards. Only authorized and trained personnel should have access to these modules. To reduce the risk of electrical shock or burns, modules may be covered with an opaque material during installation. Do not touch live terminals with bare hands. Use insulated tools for electrical connections. Do not use these modules with solar concentration.

PERMIT


- Before installing your PV system, contact local authorities to determine the necessary permits, installation and inspection requirements.

INSTALLATION AND OPERATION

- The PV module is considered to be in compliance with UL1703 only when the PV module is mounted in the manner specified by the installation manual.
- Systems should be installed by qualified personnel only. The system involves electricity, and can be dangerous if the personnel are not familiar with the appropriate safety procedures.
- **Do not step on the module.**
- Although the PV module is quite durable, the glass can be broken if it is dropped or hit by tools or other objects. This will render the PV module inoperable.

- The module frame is made of anodized aluminum, and therefore corrosion can occur if the module is subject to a salt-water environment and/or is in contact with another type of metal (galvanic corrosion). Pay attention to the above and take appropriate measures to prevent corrosion when selecting the installation environment, material of support structure, and clamping method.
- The PV module frame(s) must be attached to a support structure by one of the methods described in Section 6, INSTALLING PV MODULES.
- Module support structures used to support the PV module(s) should be wind rated and approved by the appropriate local and civil codes prior to installation.
- Do not expose the back of the module to direct sunlight
- In Canada, installation shall be in accordance with CSA C22.1, Safety Standard for Electrical Installations, Canadian Electrical Code, Part 1.

- When handling the modules, **DO NOT HOLD THEM BY SUPPORTING ONLY ONE SIDE OF THE FRAME BECAUSE IT CAN CAUSE SEPARATION OF THE GLASS AND FRAME.**

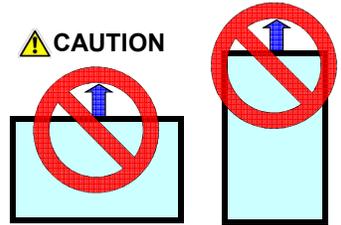

- Do not touch the PV module with bare hands. The frame of the PV module may have sharp edges and may cause injury. Wear suitable gloves, such as leather gloves with padding in the palm and finger areas.

FIRE RATING

- In case of roof installation, the PV module assembly shall be mounted on a fire resistant roof covering rated for the application. The PV module is comprised of a glass front surface and polyethylene terephthalate (PET) backsheet and has a Class C fire rating.
- The fire rating of the PV module is valid only when mounted in the manner specified in the installation manual.

GROUNDING

- The PV module with exposed conductive parts is considered to be in compliance with UL1703 only when it is electrically grounded in accordance with the instructions presented below and the requirements of the National Electrical Code.
- Refer to “8.GROUNDING” section.

BATTERY

- When PV modules are used to charge batteries, the battery must be installed in a manner which will ensure the performance of the system and the safety of its users. **Follow the battery manufacturer’s safety guidelines concerning installation, operation and maintenance recommendations.** In general, the battery (or battery bank) should be kept away from people and animals. Select a battery site that is protected from sunlight, rain, snow, debris, and is well ventilated. Most batteries generate hydrogen gas when charging which can be explosive. Do not light matches or create sparks near the battery bank. When a battery is installed outdoors, it should be placed in an insulated and ventilated battery case specifically designed for this purpose.

4. SITE SELECTION

In most applications, the PV modules should be installed in a location where they will receive maximum sunlight throughout the year. In the Northern Hemisphere, the modules should typically face south, and in the Southern Hemisphere, the modules should typically face north. Modules facing 30 degrees away from true South (or North) will lose approximately 10 to 15 percent of their power output. If the module faces 60 degrees away from true South (or North), the power loss will be 20 to 30 percent. Install the solar modules where they are not shaded by obstacles such as buildings and vegetation. Pay special attention to avoid partial shadowing of the solar modules by objects during the daytime.

The PV modules should not be installed in the area with direct exposure to saltwater droplet (Guideline : within 164' (50m) of a saltwater body). The PV modules should only be installed as roof mounted in the zone between 164' (50m) and 656' (200m) from a saltwater body.

5. MODULE TILT ANGLE

The PV modules produce more power when they are pointed directly at the sun.

For grid-tie installations where the PV modules are attached to a permanent structure, PV modules should be tilted at an angle equal to the site's latitude. This will typically result in the highest annual energy output.

6. INSTALLING PV MODULES

The glass surface may have color variations depending on the viewing angle or installation circumstance. This is a normal characteristic of the glass and doesn't affect the quality of the PV module. Do not touch the glass surface with bare hand to avoid contamination. Clean the glass surface with a soft wet cloth without detergent if it is contaminated with oil or fingerprints. Do not rub the glass surface with something hard like a metal or sharp edge.

The PV modules may be installed in various applications utilizing a variety of support structures and attachment methods as described below. For UL2703 certified attaching methods with these modules, please contact Kyocera. The structure should have enough strength to maintain the mounting span.

For optimal performance in all applications, clearance between the module frame and the mounting surface is required to allow cooler ambient air to circulate around the back of the module and to avoid module and/or wiring damage. A minimum spacing of 2" (50mm) is required between the PV module and the mounting surface around the perimeter of PV array. A minimum of .13" (3.2mm) spacing must also be maintained between module frames to allow for thermal expansion.

When installing modules in a snowy area, an appropriate countermeasure has to be taken to prevent possible damage to the lower side frame by slipping snow (e.g. attach supporting parts to the lower side frame of modules). Any damage caused by snow or such countermeasures is not covered under warranty.

BOLTING: Use 5/16" (8mm) stainless steel (or equivalent in corrosion resistance) hardware through the existing .35"x.37" (9x9.5mm) slotted mounting holes in the module frame and then through the holes on the support structure. Tighten the screws with adequate torque (usually 132in-lb; refer structure manufacturer specifications). Refer to the module drawings (Section 12) for the position of mounting holes.

CLAMPING (Standard clamp / Long Clamp):

Fasten modules firmly using standard clamps or long clamps. Use 1/4" (6mm) or larger bolt and nut, made of stainless steel or equivalent in corrosion resistance. And tighten the screws with adequate torque specified by structure manufacturer.

Clamps must have enough strength to withstand snow/wind load etc, and must not damage the module frames. Clamps also must not shade the sunlight incidence on glass surface. Support structure should support the bottom of module at least .39" (10mm) width or overlap.

Take measures to prevent module from falling off clamps. If there is clearance between clamp and module side face when using insertion systems, take measures to prevent module from moving (e.g. put plastic parts into clearance). Refer to the 'CLAMPING AREA' (Section 12) for the clamping position and length of long clamp.


The clamp specification is below;

A- SUS304 or equivalent

t: thickness	L: width	a: overlap
0.079" (2.0mm) and over	min. 1.93" (49mm)	Long side clamping; min. 0.20" (5mm)
0.098" (2.5mm) and over	min. 1.34" (34mm)	
0.12" (3.0mm) and over	min. 0.94" (24mm)	short side clamping; min. 0.35" (9mm)

B-anodized aluminum AL6063-T5 or equivalent

t: thickness	L: width	a: overlap
0.079" (2.0mm) and over	frame length	min. 0.28" (7mm)
0.12" (3.0mm) and over	min. 1.50" (38mm)	Long side clamping; min. 0.20" (5mm)
0.14" (3.5mm) and over	min. 1.18" (30mm)	
0.16" (4.0mm) and over	min. 0.98" (25mm)	Short side clamping; min. 0.35" (9mm)

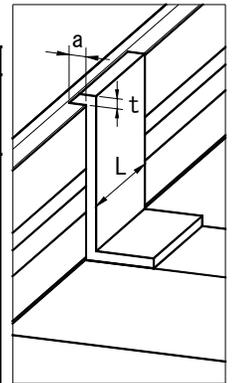

The clamp shape and dimensions above are for reference only, and any damage caused by clamps is not covered under warranty.

7. MODULE WIRING

The PV module comes pre-wired. Each module has two #12 AWG type PV-wire stranded sunlight resistant output cables each terminated with Multi Contact MC4-EVO3 (PV(-)MC4LPS-XX: MC-K4BE/PV-PLS-BIII, PV-PLS-SIII) connectors. The positive (+) terminal has a male connector while the negative (-) terminal has a female connector. The module wiring is solely for series connections only, i.e. male (+) to female (-) interconnections. For field wiring, follow the National Electric Code (NEC) Article 690 or local code.

NOTE: When making connections with the connectors, make sure the array is disabled. **DO NOT MAKE CONNECTIONS WHILE UNDER LOAD.** Module output connections are marked “Do not disconnect under load”.

NOTE: MAXIMUM SYSTEM VOLTAGE IS 1000 VDC.

The PV module and most PV system components have a maximum system voltage rating of 1000 volts DC. Some grid-tie systems operate at or near this voltage rating. Like other polycrystalline PV modules, the open-circuit voltage of the PV modules increases as the ambient temperature decreases. Maximum system voltage is computed as the sum of the open-circuit voltage of the series-connected PV modules for the lowest expected ambient temperature. Refer to the National Electrical Code Article 690-7(A) for determining the maximum number of the PV module that can be placed in series. Temperature coefficients, specific to the module of use, can be used to provide the most accurate prediction of module voltage under temperature extremes.

NOTE: Limit the maximum number of series connection of the PV module so that the system voltage is 1000V or less.

NOTE: Do not connect the modules in parallel without maximum over current protection.

NOTE: The minimum radius that the cable can be bent for the PV module is 1.14” (29mm).

NOTE: Under normal conditions, PV module is likely to experience conditions that produce more current and/or voltage than reported at standard test conditions. The requirements of the National Electrical Code (NEC) in Article 690 shall be followed to address these increased outputs. In installations not under the requirements of the NEC, the values of I_{sc} and V_{oc} marked on this module should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor ampacities, overcurrent device ratings, and size of controls connected to the PV output.

8. GROUNDING

Before installation, consult the local codes and the authorities having jurisdiction to determine the necessary grounding requirements. When installing in the US market, attach all PV module frames to an earth ground in accordance with the National Electrical Code (NEC) Article 250. Proper grounding is achieved by connecting PV module frames and all metallic structural members contiguously to one another using a suitable grounding conductor. The grounding conductor shall be of copper, copper alloy or another material suitable for use as an electrical conductor per NEC. The grounding conductor must then make a connection to earth using a suitable earth grounding electrode. Ensure positive electrical contact through the anodizing on the module frame extrusion by utilizing one of the following methods.

Attach the grounding conductor:

- (1) to one of the .28” (7mm) diameter holes marked “ground” using 1/4”(6mm) stainless steel bolt. Wrap conductor around bolt. Tighten the screws with adequate torque (62 in-lb: UL evaluation torque).
- (2) to a ground lug (manufacturer:ILSCO, model:GBL-4DBT). The lug is attached to one of the .28”(7mm) diameter holes marked “ground”, using #10-32 stainless steel bolt with 40 in-lb torque.

- (3) to a ground lug (manufacturer:ILSCO, model:GBL-4DBT). The lug is attached to one of the .16”(4mm) diameter holes marked “ground”, using #10-32 stainless steel tapping machine screw with 30 in-lb torque. Screw length should be 20mm or less.


- (4) to a wire bolt (manufacturer:Tyco, model:2058729-1) using 3/8”(10mm) wire binding nut with 45 in-lb torque. The bolt is attached to one of the .19”(4.7mm) diameter holes marked “ground”, using #8-32 (4mm) mounting washer nut with 25 in-lb torque.

NOTE: A stainless steel star washer or mounting washer nut, having contact with anodized surface of the frame, must be employed to break through the anodized layer of the frame extrusion and electrically connect the grounding conductor to the conducting aluminum frame material.

NOTE: As a general rule, avoid direct contact of copper or copper alloy ground conductors with the aluminum frame to prevent galvanic corrosion. All ground bond securing hardware in contact with either the aluminum module frame and/or copper or copper alloy ground conductors must be stainless steel.

NOTE: Where common grounding hardware (nuts, bolts, star washers, spring-ring lock washers, flat washers and like that) is used to attach a listed grounding/bonding device, the attachment must be made in conformance with the grounding device manufacturer’s instructions.

NOTE: Common hardware items such as nuts, bolts, star-washers, lock washers and the like have not been evaluated for electrical conductivity or for use as grounding devices and should be used only for maintaining mechanical connections and holding electrical grounding devices in the proper position for electrical conductivity. Such devices, where supplied with the module and evaluated through the requirement in UL 1703, may be used for grounding connections in accordance with the instructions provided with the module.

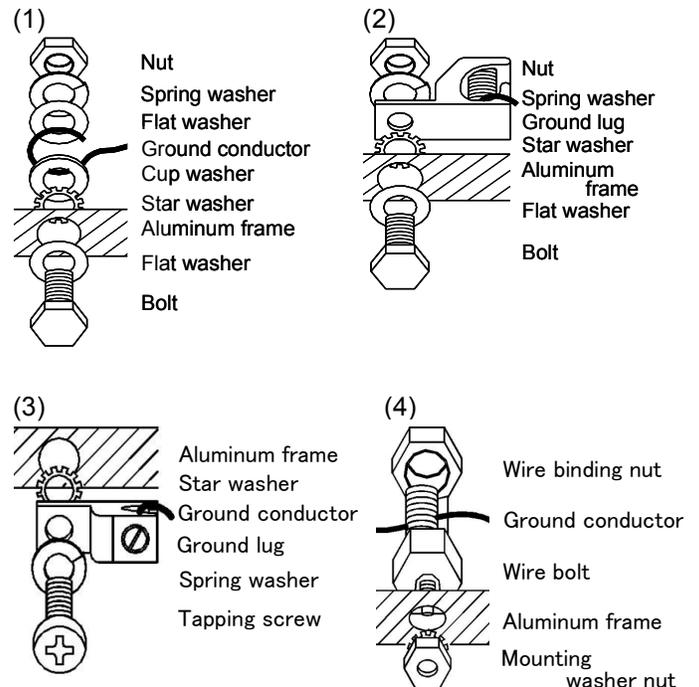

9. BLOCKING DIODES

In systems utilizing a battery, blocking diodes are typically placed between the battery and PV module output to prevent battery from discharging at night. The PV module is made of polycrystalline cells with high electrical "back flow" resistance to nighttime battery discharging. As a result, the PV modules do not contain a blocking diode when shipped from the factory. Most PV charge regulators and inverters incorporate a nighttime disconnect feature.

10. BYPASS DIODES

Partial shading of an individual module in a source circuit string (i.e. two or more modules connected in series) can cause a reverse voltage across the shaded cells within the module. Module output current is then forced through the shaded area by the remaining illuminated cells and other PV modules in series with the partially shaded module(s). The current forced through the shaded cells within the PV module(s) causes additional module heating and severe loss of power. All the PV modules are supplied with factory installed (non user serviceable) bypass diodes.

The purpose of bypass diodes is to provide a low-resistance current path around the shaded cells, thereby minimizing PV module heating and array current losses.

The PV module employs bypass diodes that have:

- Rated Average Forward Current [$I_{F(AV)}$] **Above** maximum system current at highest PV module operating temperature.
- Rated Repetitive Peak Reverse Voltage [V_{RRM}] **Above** maximum system voltage at lowest PV module operating temperature.

11. MAINTENANCE

The PV module is designed for long life and requires very little maintenance. Under most weather conditions, normal rainfall is sufficient to keep the module glass surface clean. If dirt build-up becomes excessive, clean the glass surface only with a soft wet cloth without detergent. **USE CAUTION WHEN CLEANING THE BACK SURFACE OF THE PV MODULE TO AVOID PENETRATING BACK SHEET.** The PV modules that are mounted flat (0° tilt angle) should be cleaned more often, as they will not "self clean" as effectively as modules mounted at a 15° tilt or greater. Once a year, check the general condition of the wiring and check to be sure that mounting hardware is tight. Loose connections may result in a damaged module or array.

KYOCERA Solar Group Sales Office

- KYOCERA Corporation
Corporate Solar Energy Group
6 Takeda Tobadono-cho Fushimi-ku, Kyoto 612-8501, Japan
Phone : 81-75-604-3476
Fax : 81-75-604-3475
<http://www.kyocera.com/>
- KYOCERA Solar, Inc.
8800 E. Raintree Drive, Suite 280, Scottsdale, AZ 85260, U.S.A.
Phone : 1-480-948-8003
Fax : 1-480-951-6329
<http://www.kyocerasolar.com/>
- KYOCERA Solar Pty Ltd.
Level 3, 6-10 Talavera Road, North Ryde NSW 2113, Australia
Phone : 61-2-9870-3946
Fax : 61-2-9888-9673
<http://www.kyocerasolar.com.au/>
- KYOCERA Solar do Brasil Ltda.
Av. das Américas, nº 20.007, Bl 02/ Sala 105 - Recreio dos Bandeirantes Ed.
Comercial Everglades Cep 22790-851 - Rio de Janeiro/ RJ – Brasil
Phone : 55-21-3724-3900
Fax : 55-21-3724-3911
<http://www.kyocerasolar.com.br>

12. SPECIFICATIONS

Under certain conditions, a photovoltaic module may produce more voltage and current than reported at Standard Test Conditions (STC). Refer to Section 690 of the National Electrical Code for guidance in series string sizing and choosing overcurrent protection.

Module Specification

Electrical Characteristics: @ STC				
Module Type	KU245-6BCA KU245-6BPA	KU250-6BCA KU250-6BPA	KU255-6BCA KU255-6BPA	KU260-6BCA KU260-6BPA
Pmax	245W	250W	255W	260W
Voc	37.6V	37.8V	38.0V	38.3V
Isc	8.67A	8.75A	8.83A	9.09A
Vpm	30.3V	30.5V	30.8V	31.0V
Ipm	8.09A	8.20A	8.28A	8.39A
Factory installed Bypass Diode				
Number	3pcs.			
Series Fuse Rating	15A			
Thermal Characteristics: Temp. Coefficient				
Voc [V/°C] ([%/°C])	-1.34x10 ⁻¹ (-0.36)	-1.34x10 ⁻¹ (-0.36)	-1.35x10 ⁻¹ (-0.36)	-1.36x10 ⁻¹ (-0.36)
Isc [A/°C] ([%/°C])	5.08x10 ⁻³ (0.06)	5.13x10 ⁻³ (0.06)	5.18x10 ⁻³ (0.06)	5.33x10 ⁻³ (0.06)
Vpm [V/°C] ([%/°C])	-1.46x10 ⁻¹ (-0.48)	-1.47x10 ⁻¹ (-0.48)	-1.48x10 ⁻¹ (-0.48)	-1.49x10 ⁻¹ (-0.48)
Physical Characteristics:				
Length	65.43" (1662mm)			
Width	38.98" (990mm)			
Depth	1.81" (46mm)			
Weight	44.1 lb (20.0 kg)			
Mounting Hole	Slotted hole .35x.37" (9x9.5mm), Quantity 4			
Grounding Hole (Back side hole)	Diameter .28" (7mm), Quantity 4 / Diameter .19" (4.7mm), Quantity 4			
Grounding Hole (Side hole)	Diameter .16" (4mm), Quantity 4			
Application Class	Class A			


NOTES

- (1) The electrical characteristics are within +/-5% (UL verified 10% tolerance, according to UL 1703) of the installed values of Pmax and within +/-10% of the installed values of Isc and Voc under standard test conditions (irradiance of 1000W/m², AM 1.5 spectrum, and a cell temperature of 25 deg C).
- (2) See module specification sheet for most recent electrical characteristics.
- (3) See module drawing for mounting and grounding holes locations.

REVISION RECORD


Jan. 30, 2015 The first edition

MODULE DIMENSIONS

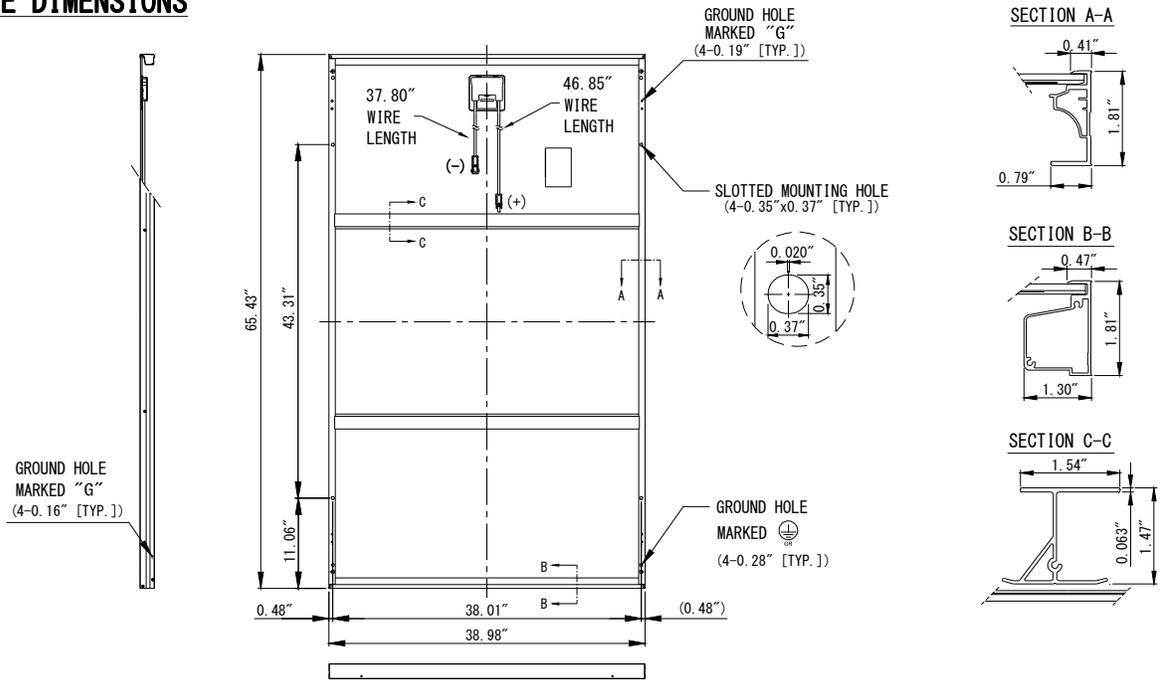


CLAMPING AREA

1. Standard Clamp

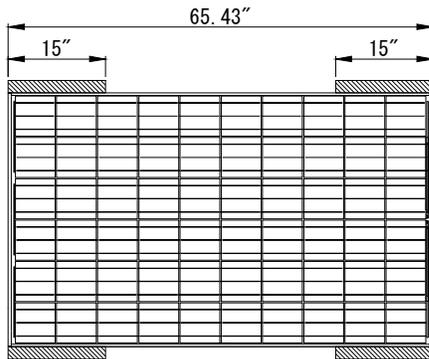


PERMISSIBLE CLAMPING RANGE

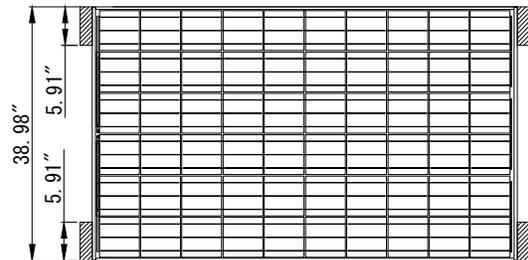


- The PV modules can be installed in either a portrait or landscape position.
- Use at least 4 clamps per module and must be located in each range shown above.

2. Long Clamp

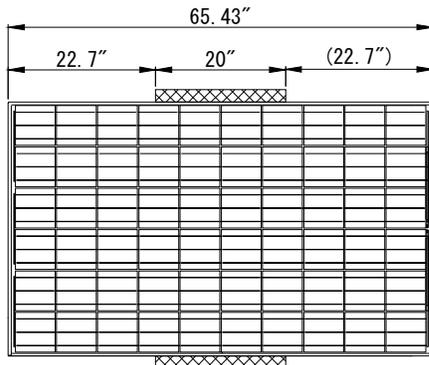

MINIMUM CLAMP LENGTH & POSITION

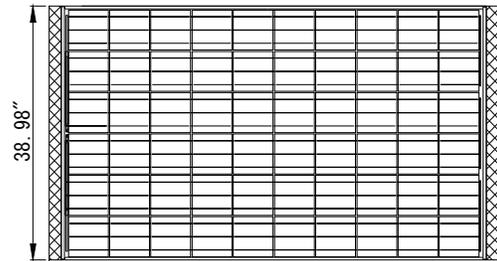

- The PV modules can be installed in either a portrait or landscape position.